

preamble code < 引导码 >


29-30 digits are channel code(blue)

transmitted waveform of emitter
遥控器发射波形

前28位为地址码(黑色), 29~32位为通道码(蓝色色), 33~40位为指令码(红色)。

the first 28 digits are adress code(black)

33-40 digits are instruction code(red)

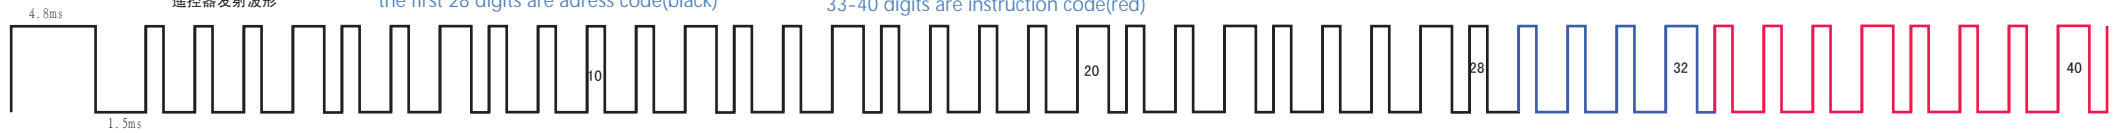

upward instruction code 上行指令码 0x11

down instrucion code 下行指令码 0x33

stop instruction code 停止指令码 0x55

setting instruction code 设置指令码 0xCC

stop upward jogging instruction code 上行点动停止指令码 0x1E

stop down jogging instruction code 下行点动停止指令码 0x3C

LOCK= 0x66